Model 107 starting 08.1985

124

126 starting 09.1985

129

140

201 starting 01.1985




Open the expansion tank/radiator cap only at coolant temperatures below 90°C.

- Opening: Turn cap only to first detent to release pressure.
- Turn cap to second detent and remove cap from expansion tank/radiator.

Coolant level should be as follows:

- Up to mark printed on tank (arrow).
- With warm coolant approx. 1 cm above this mark.

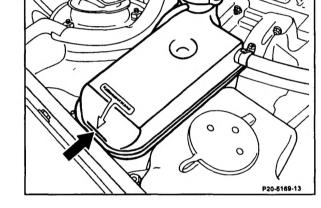

If coolant loss is excessive, determine the cause and repair on separate order.